

Cylinder Flow valve




Connect the flow valve to the cylinder.
Push the valve until you hear a click.



Connect the nasal prongs or mask tubing
to the valve.



Turn the cylinder on.

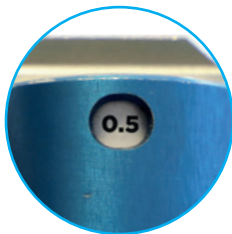

Set the flow on the valve to the correct
flow rate.

